

Divan Fitting Instructions

SlimBase / Euro-Slim with Easylink, 6 x Legs Castors & Glides

Tools needed: Cross head screwdriver.




Part's list

Divan x 1

Legs Castors & glides x 6



Chrome Mushroom Bolt's x 2

125mm Chrome Link bar x 1

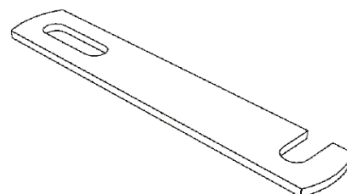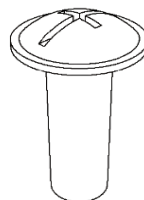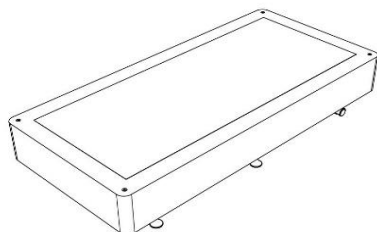


1 - Unwrap the divan and position it safely on its side.


2 - Manually screw the Legs into the dedicated holes provided on the bottom of the divan making sure they are secure. The set of holes towards the inside are for INSET leg position.

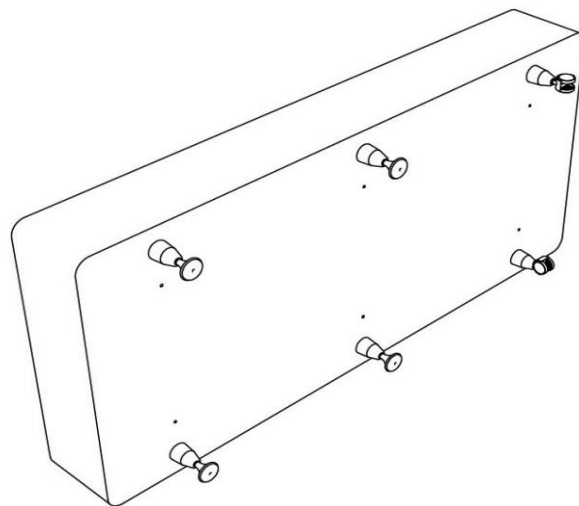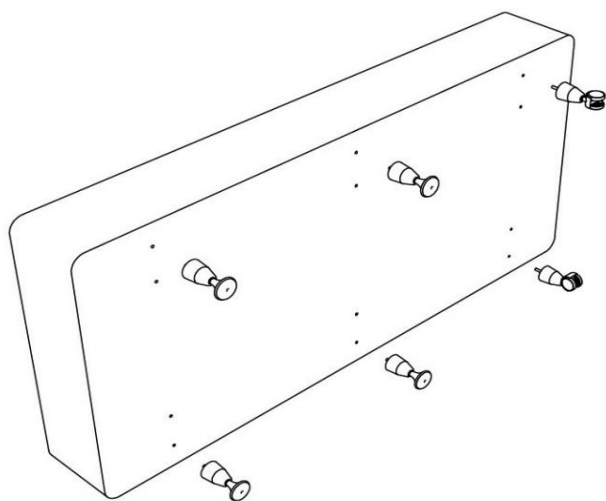



3 - Now rotate the divan so it is safely on the floor.

4 - Push the two divans together like the image shown below.

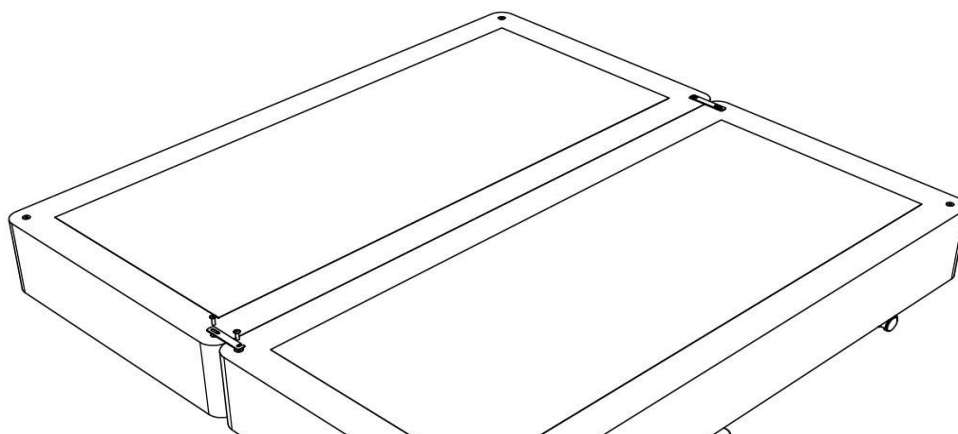

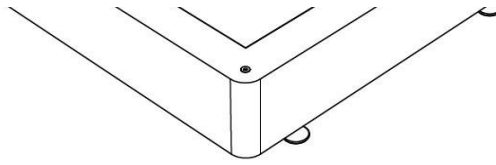

5 - Using a cross head screwdriver and two chrome mushroom head bolts, connect the chrome 125mm link bar to the divans. As illustrated below.

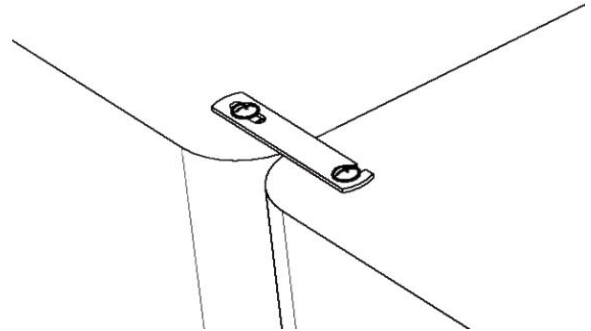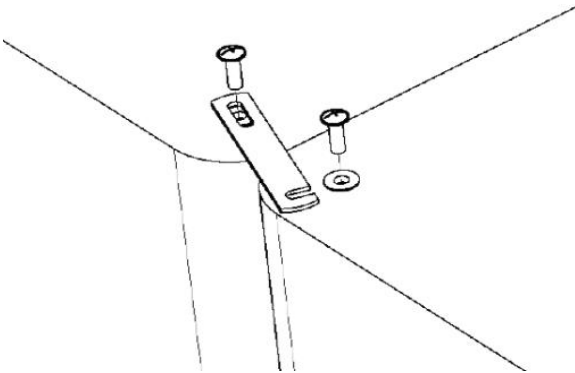

6 - Repeat the same process at the other end of the divans. Divans are now linked and ready for the mattress to be placed.

