


Divan Fitting Instructions

FlexiBase with Easylink, 4 Glides


Tools needed: Rubber mallet and cross head screwdriver.

Part's list


Divan x 1

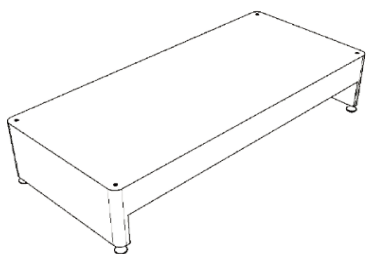


Glides x 4

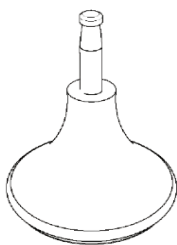

Chrome Mushroom Bolt's x 2


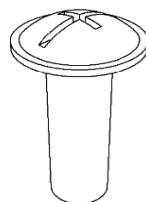


125mm Chrome Link bar x 1

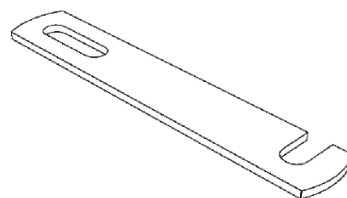


1 - Unwrap the FlexiBase and position it safely on its side.

2 - Using a rubber mallet, tap the glides into the dedicated holes provided on the bottom of the FlexiBase making sure they are in securely.

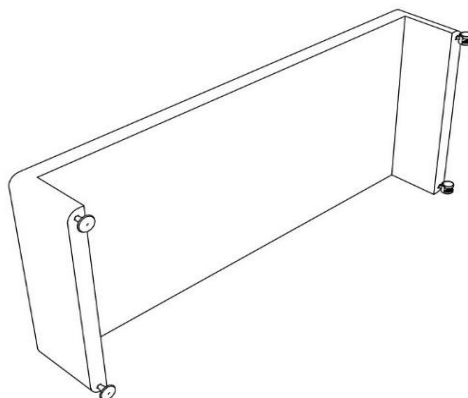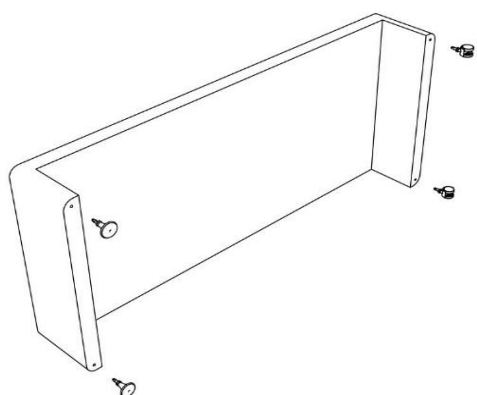


3 - Now rotate the FlexiBase so it is safely on the floor.

4 - Push the two FlexiBases together like the image shown below.

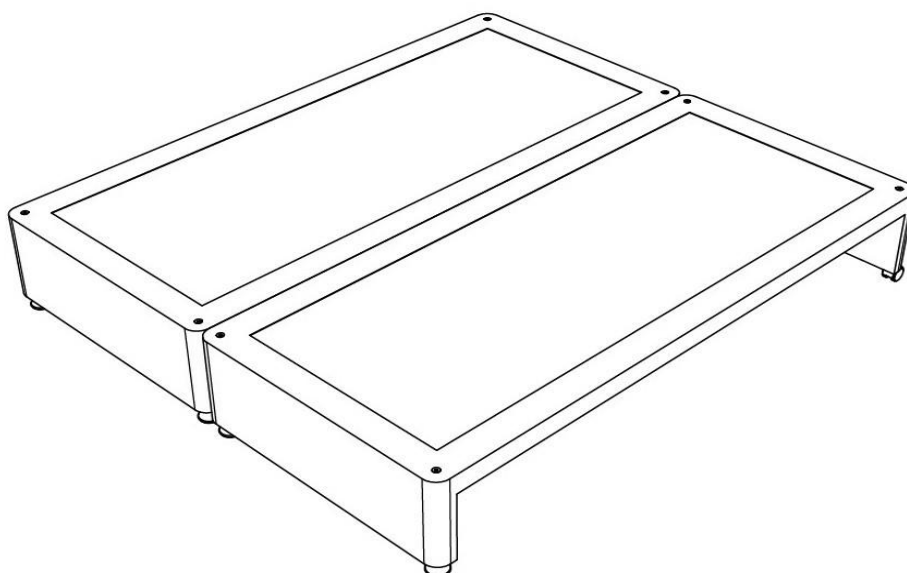

5 - Using a cross head screwdriver and two chrome mushroom head bolts, connect the chrome 125mm link bar to the divans. As illustrated below.

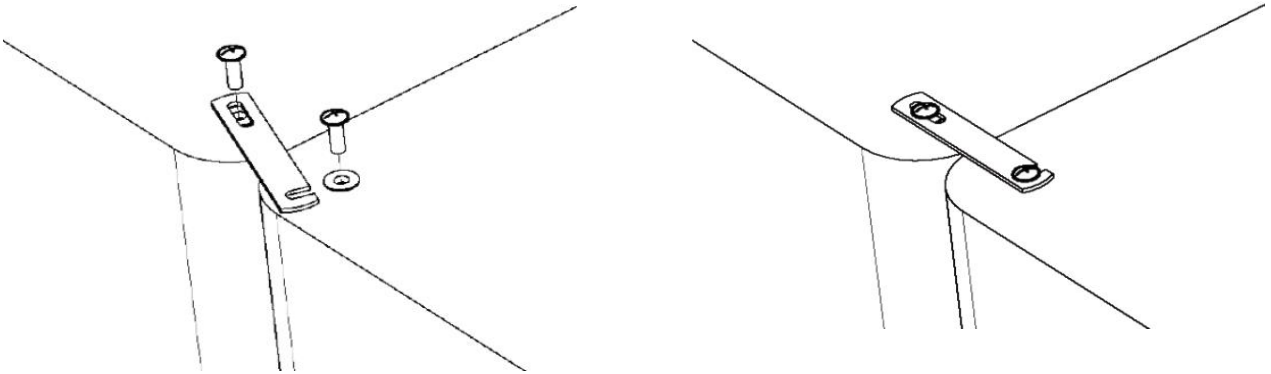

6 - Repeat the same process at the other end of the divans. FlexiBases are now linked and ready for the mattress to be placed.

