


Divan Fitting Instructions

ClassicBase EW Easylink with Castors & Glides (Head End)


Tools needed: Rubber mallet and cross head screwdriver.

Part's list


Divan x 1

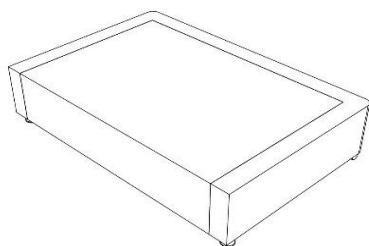


Castors x 2 & Glides x 2

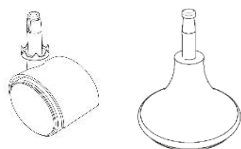

Chrome Mushroom Bolt's x 2



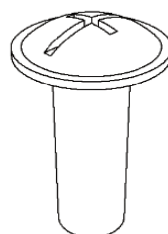


125mm Chrome Link bar x 1

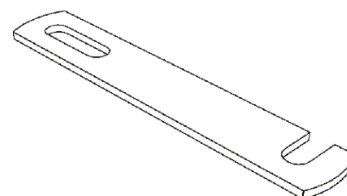

1 - Unwrap the ClassicBase and position it safely on its side.

2 - Using a rubber mallet, tap the glides into the dedicated holes provided on the bottom of the ClassicBase making sure they are in securely.

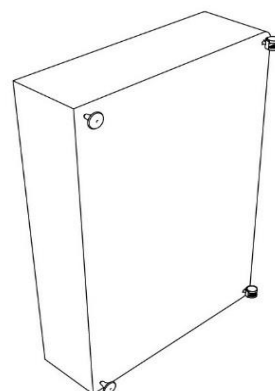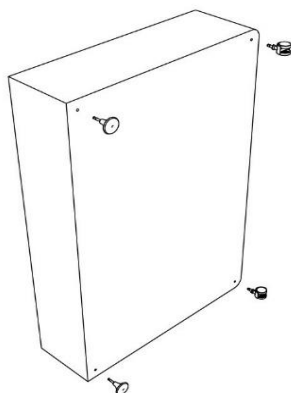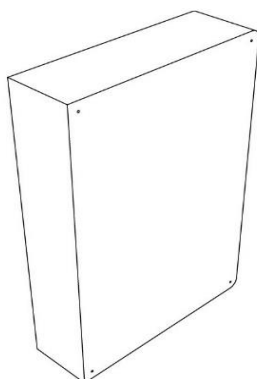


The HEAD end of the Classic Divan is now complete, We now need to prepare the FOOT end.


ClassicBase EW Easylink with Castors & Glides (Foot End)

Part's list


Divan x 1

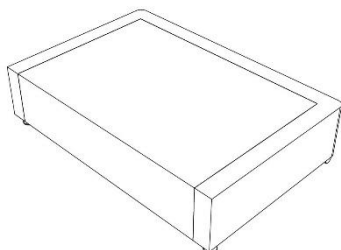


Glides x 4

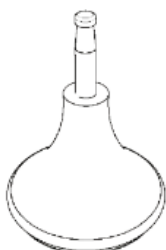

Chrome Mushroom

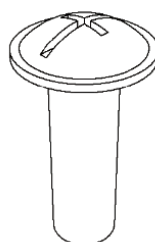


125mm Chrome Link bar x 1

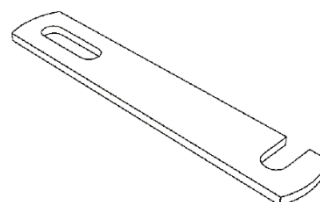


1 - Unwrap the ClassicBase and position it safely on its side.

2 - Using a rubber mallet, tap the glides into the dedicated holes provided on the bottom of the ClassicBase

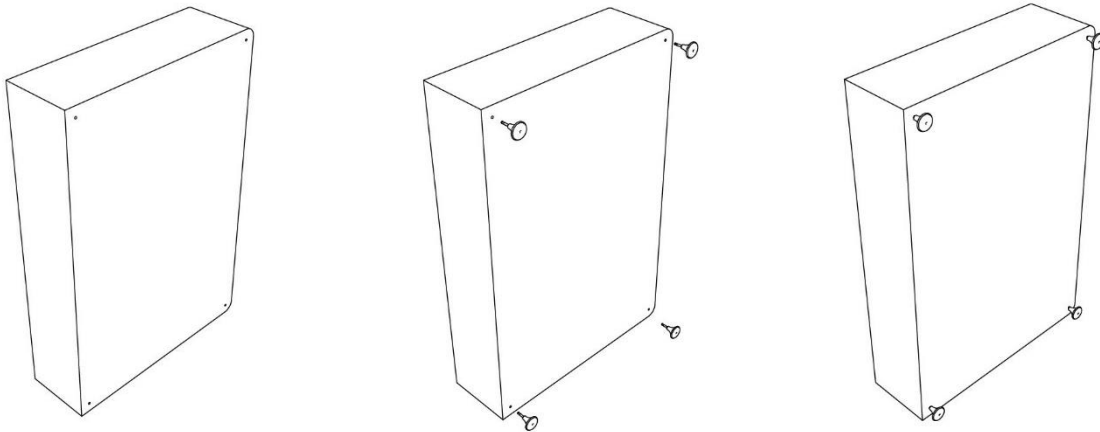


3 - Now rotate the ClassicBase so it is safely on the floor.

4 - Push the two ClassicBase (head & foot ends) together like the image shown below.

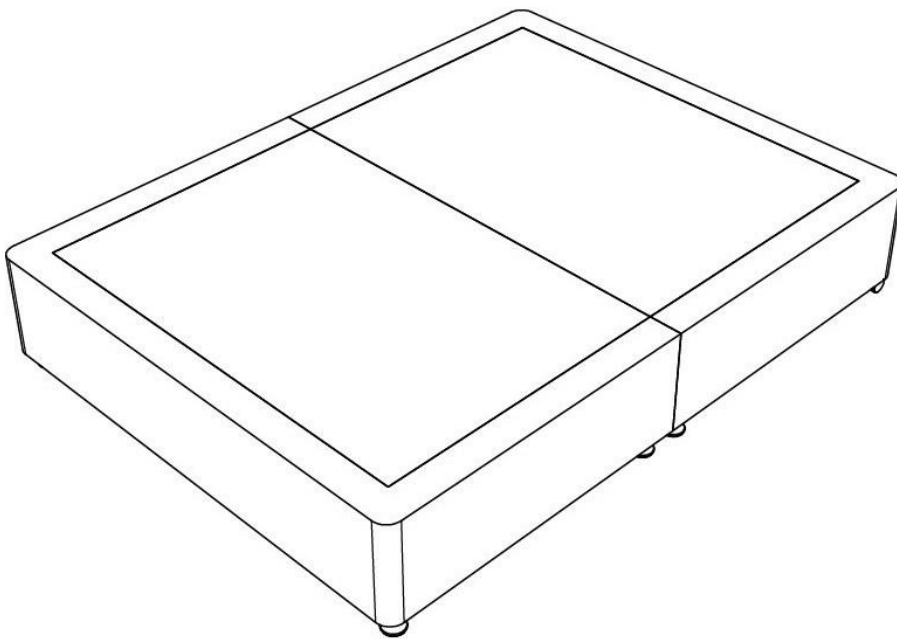

5 - Using a cross head screwdriver and two chrome mushroom head bolts, connect the chrome 125mm link bar to

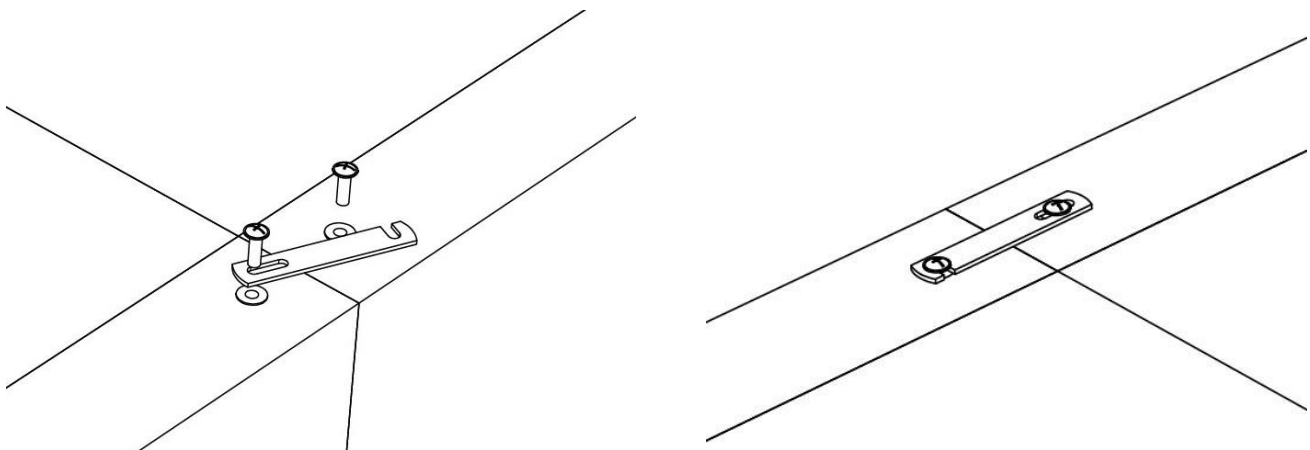

6 - Repeat the same process at the other end of the divans. ClassicBase are now linked and ready for the mattress

