

Divan Fitting Instructions

SlimBase with Easylink, 6 x Legs Castors & Glides

Tools needed: Cross head screwdriver.





Part's list

Divan x 1

Leg Castor x 2
Leg Glide x 4


Chrome Mushroom
Bolt's x 2

125mm Chrome Link bar x 1

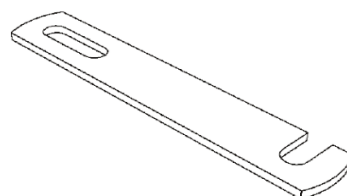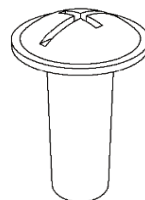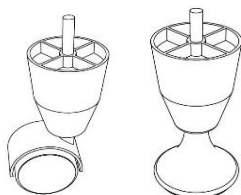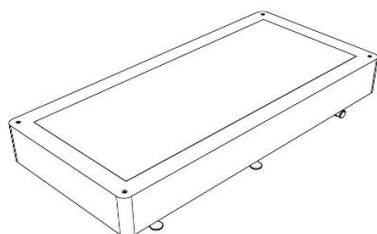


1 - Unwrap the SlimBase and position it safely on its side.

2 - Manually screw the Legs into the dedicated holes provided on the bottom of the SlimBase making sure they are secure. The set of holes towards the inside are for INSET leg position.

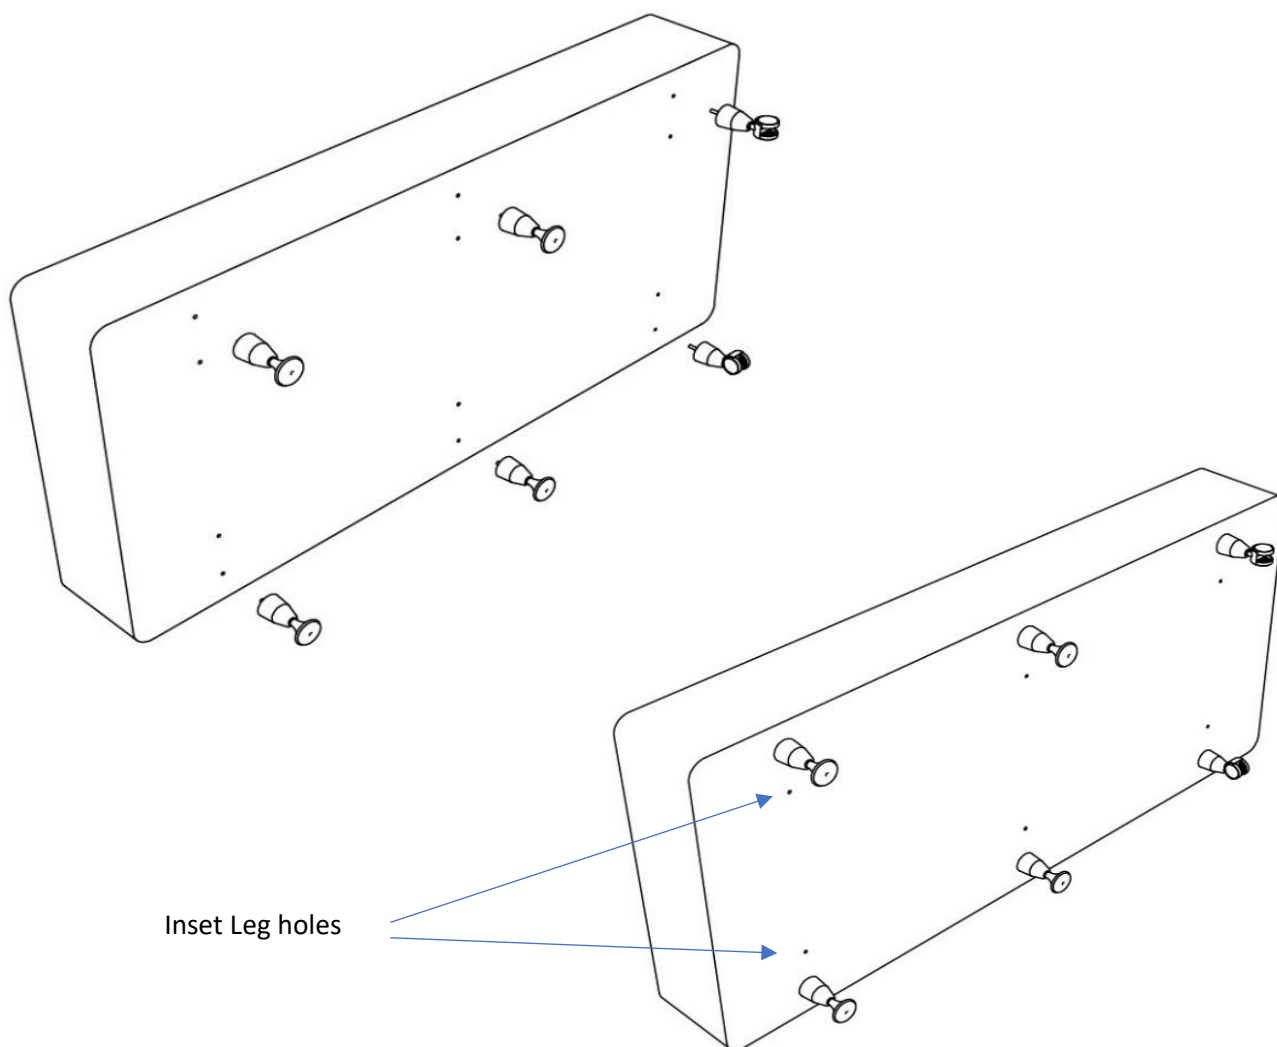


3 - Now rotate the SlimBases so it is safely on the floor.

4 - Push the two SlimBases together like the image shown below.

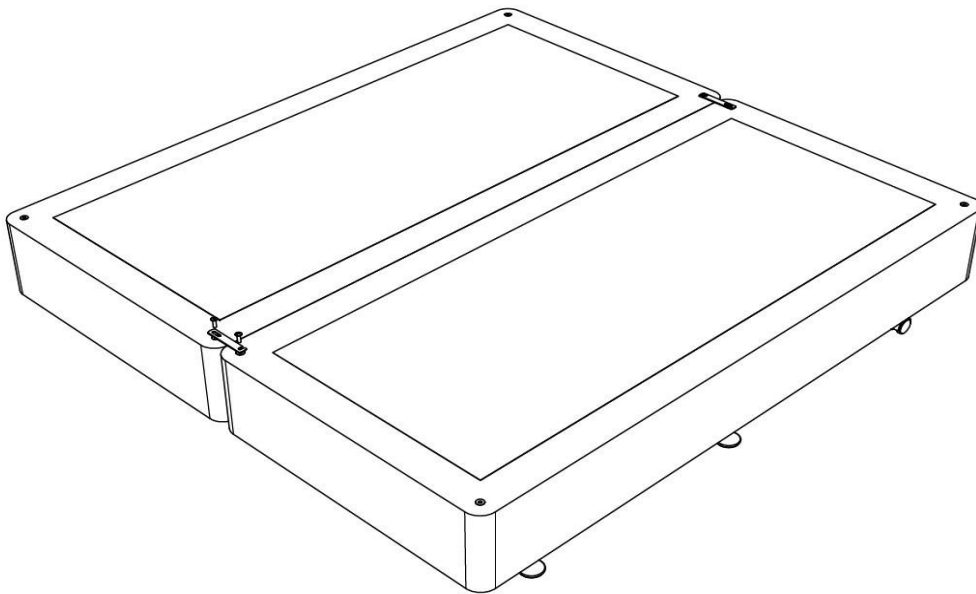

5 - Using a cross head screwdriver and two chrome mushroom head bolts, connect the chrome 125mm link bar to the divans. As illustrated below.

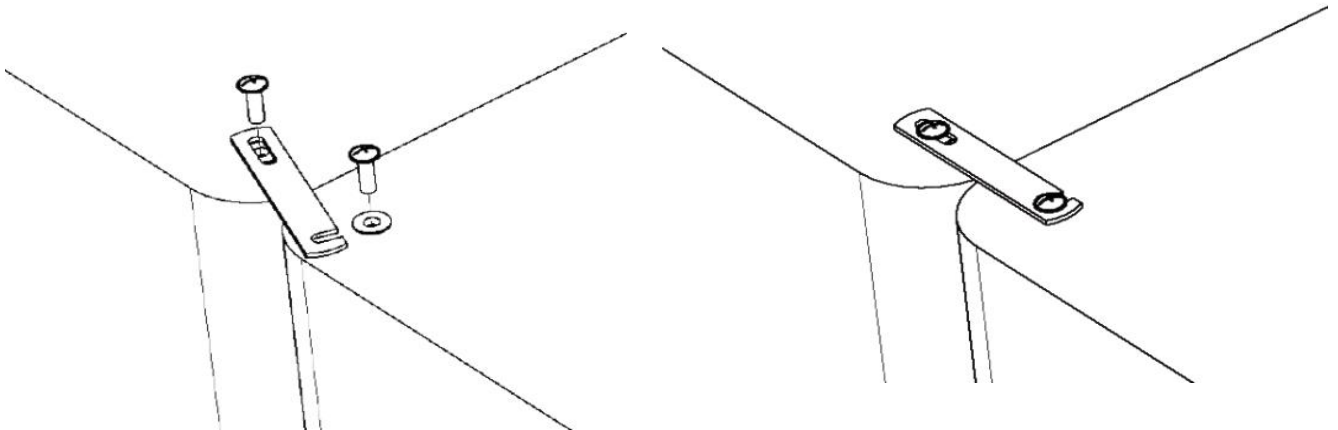

6 - Repeat the same process at the other end of the divans. SlimBases are now linked and ready for the mattress to be placed.

