


Divan Fitting Instructions

FlexiBase Single


Tools needed: Rubber mallet.

Part's list


Divan x 1

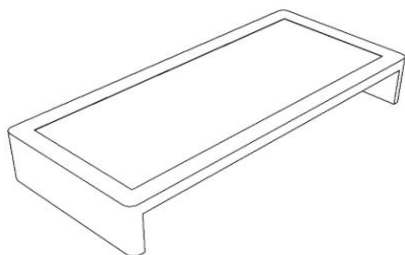

Castors x 2


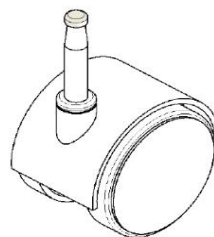


Glides x 2

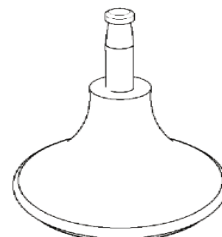

1 - Unwrap the FlexiBase and position it safely on its side.

2 - Using a rubber mallet, tap the castors & glides into the holes provided on the bottom of the FlexiBase making sure they are in securely.

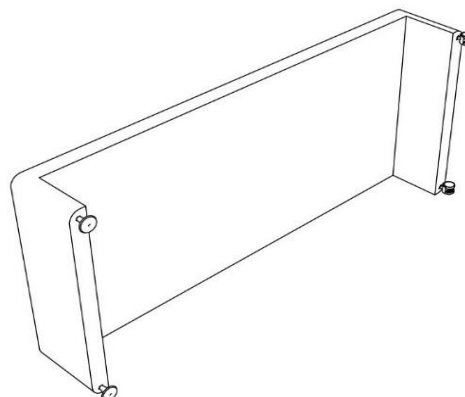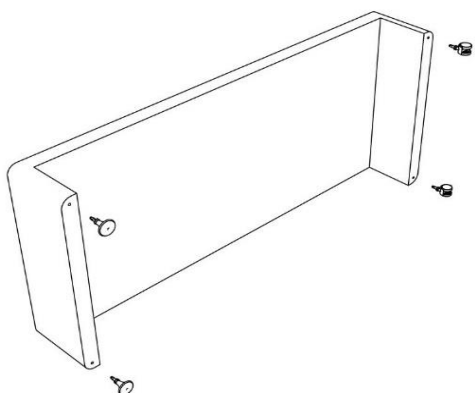

3 - Now rotate the FlexiBase so it is safely on the floor.

