

Divan Fitting Instructions

ClassicBase NS Easylink with Castors & Glides

Tools needed: Rubber mallet and cross head screwdriver.

Part's list





Divan x 2

Castors
x 4


Glides x 8

Chrome Mushroom
Bolt's x 4



125mm Chrome Link bar x 2

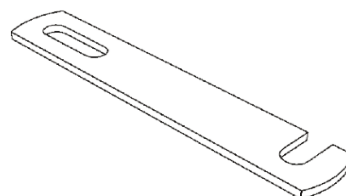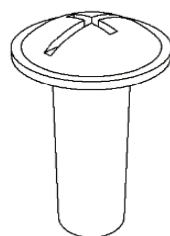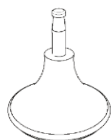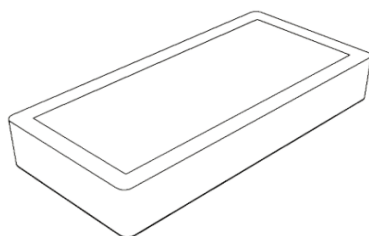

1 - Unwrap the ClassicBase and position it safely on its side.

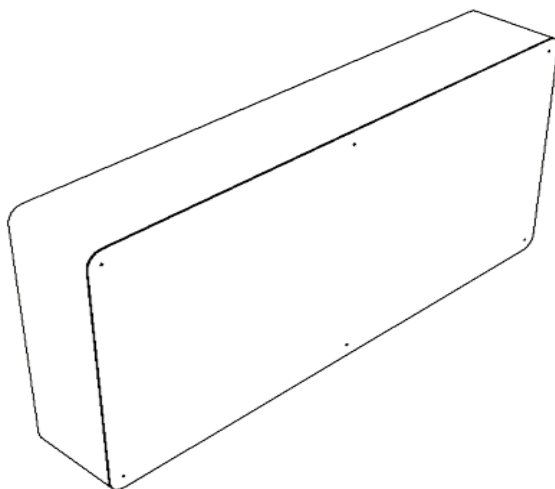


2 - Using a rubber mallet, tap the glides into the dedicated holes provided on the bottom of the ClassicBase making sure they are in securely.

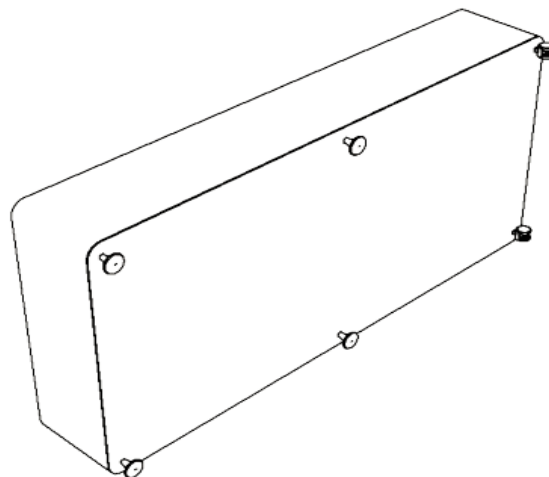
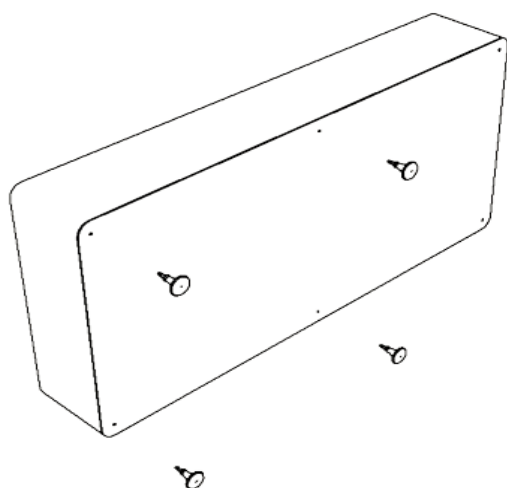


3 - Repeat the same again for the other half of the divan set.

- 3 - Now rotate both of the ClassicBase so it is safely on the floor.
- 4 - Push the two ClassicBase divans together like the image shown below.

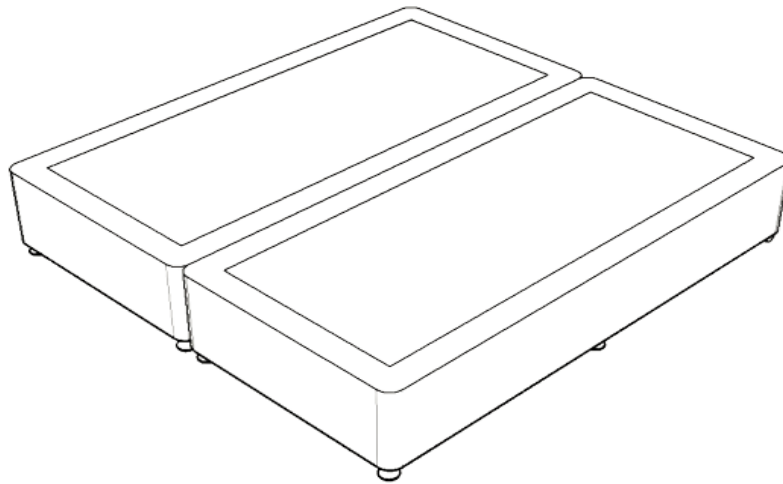

- 5 - Using a cross head screwdriver and two chrome mushroom head bolts, connect the chrome 125mm link bar

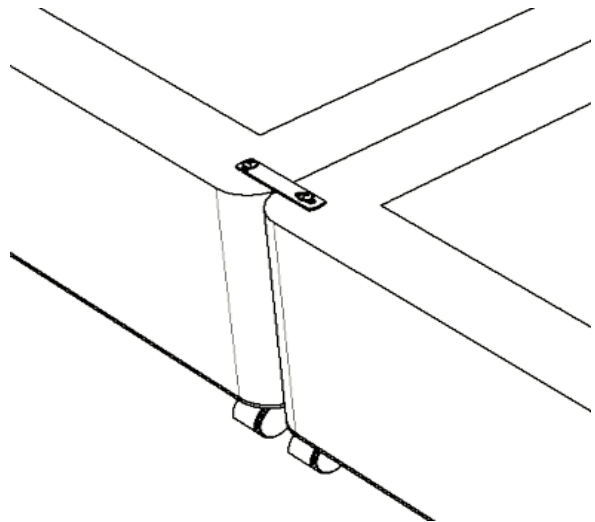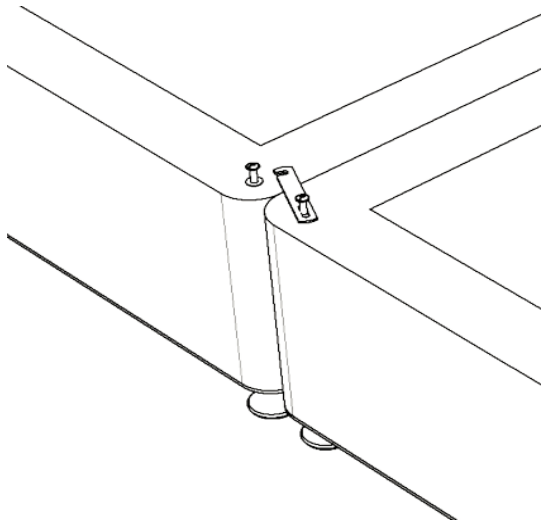

- 6 - Repeat the same process at the other end of the divans. ClassicBase are now linked and ready for the mattress to be placed.

